



OPERATING INSTRUCTIONS

Retro Back Bar Heavy Duty

V1/2020



This page is intentionally left blank

Contents

General Hazards	4
Electrical Connection	4
Unpacking	4
Installation	4
Ventilation	4
Shelves / Pans / Slides	5
Initial Start Up	6
Checks	6
Using Your New Piece of Refrigeration Equipment	6
Commissioning Instructions	7
Temperature setting	7
Defrosting	7
Maintenance and Cleaning: Condenser, Gasket Replacement	8
End of Life Disposal Requirements	8
Control Panel	9
Fault Finding	10
Wiring Diagram	11
Notes	12

All information is subject to change without prior notice.

General Hazards

All moving parts of the refrigerator are suitably guarded, and the moving parts can only be accessed by using tools which should only be attempted by a qualified person.

Electrical Connection

This product is supplied with a molded plug which needs a suitable socket. This cabinet should not be used outside and should be used in a dry environment. The plug needs to be accessible once the equipment is placed in its final position. Should the plug need changing, this must be done by a qualified person.



Unpacking

Leave all packaging in place until refrigerator is in its final position to avoid damage. When the cabinet is in its final position, carefully remove all packaging and check for damage. Any damage should be reported immediately to your dealer. All packaging should be carefully disposed of and recycled where possible.

Installation

These cabinet is very easy to move around as most CyberChill products are supplied on castors. If for any reason the cabinet has to be laid down, it should always be laid on its back and not its side or front to avoid damage. If the cabinet is supplied with castors, extreme care should be taken when lowering or raising the cabinet as the castors can run away whilst lifting or lowering. A person should always be standing at the base of the cabinet whilst it is being lowered or raised. Cabinet should not be plugged in for at least 1 hour if it has been laid down or tipped during installation.

This product must be placed on a level floor to ensure the automatic door closing and correct draining of condensate.

Ventilation

Refrigeration equipment generates a lot of heat. A 2-door freezer cabinet for example gives off the same heat as a 3kW electric heater. Therefore, it is very important that the cabinet must be installed with sufficient space around it for ventilation and for maintenance access. Ventilation grills must not be blocked, or even partially blocked as this could affect the cabinet's performance and life span.

Shelves / Pans / Slides




Cut the nylon ties holding the shelves in position for transportation. Fit the shelves in the correct position to suit the user.




Adjustable Legs / Levelling Feet

Models fitted with adjustable legs or levelling feet can be levelled by screwing the legs/feet in or out to the desired height.

Initial Start Up

Plug the molded plug into a suitable socket. Tap  twice to unlock. If necessary, push the  button on the controller to start the unit. The cabinet air temperature will be displayed once the unit is running. To standby the unit when running, press and hold the  button for 3 seconds.

Checks

After initial startup, after a 3-minute time delay the cabinet should start to pull down to the preset temperature, check that the temperature is reducing and listen inside and outside the cabinet to make sure the fans are turning freely to check there has been no movement in shipping. If time permits, stay with the cabinet until the preset temperature is reached and the condensing unit cuts out. The preset temperature can be checked by pressing the  button on the controller.

Using Your New Piece of Refrigeration Equipment




The cabinet must reach its preset operating temperature before loading any product. Ensure stored products are evenly distributed on shelves ensuring that no more than 40kg are placed on each shelf.

Retro Back Bar cabinets are designed to store sealed bottle/cans drinks product only (including on the base) and should never be used to store food.

Commissioning Instructions


Temperature Setting (+3°C to +15°C)*

Retro Back Bar Heavy Duty cabinets are designed to operate between +3°C to +15°C but the factory presets the temperature for +5°C.

The temperature setting can be checked by pressing the  twice to unlock the display. Once unlocked press the  button and display will show SP. This setting can then be changed to better meeting site conditions by pressing the (+) or (-) arrows and then  to confirm. The temperature set is the cut out (stopping) temperature, the cut in (starting) temperature is determined by the differential.

* Food should not be stored in this product.

Defrosting

CyberChill refrigerated cabinets are fitted with a fully automated defrost system that ensures the cooling system remains free from ice under normal conditions. If a manual defrost is required, this can be activated by simultaneously pressing  for 3 seconds which will terminate automatically once the pre-programmed temperature or time as been reached.

Maintenance

The cabinet is fully automatic and apart from cleaning needs very little maintenance. Interior and exterior should be cleaned with soap and water and no abrasives should be used as they will scratch and spoil the stainless-steel finish. Interior shelving and racking can be removed on most models for easy cleaning. Counter drawer sets can be fully removed, and the drawers can be washed in a dish washer if needed.

Maintenance and Cleaning

Before cleaning and maintenance, the cabinet should be unplugged from the power supply. Door Gaskets should be cleaned with warm soapy water and inspected on a regular basis and if damaged they should be replaced. Cooking oils and harsh cleaning detergents will shorten the life of the gaskets and contact should be avoided.

Condenser Cleaning

The cabinets use low maintenance condensers. All the heat removed from the cabinet is discharged into the room via the condenser which is similar to a car radiator. This must be kept clean so that the air can pass through it to remove the heat, if it becomes choked with dust the unit will overheat and this can lead to poor cooling performance, increased energy consumption and premature mechanical failure.

The condenser should be brushed with a soft brush to remove any dust deposited on the alloy fins. The frequency of this cleaning is determined by the amount of dust in the surrounding area but should be cleaned at least once a month.

Excessive dust on the condenser and it will overheat the unit. This can lead to poor cooling performance, increased energy consumption and premature mechanical failure.

Gasket Replacement

Damaged gaskets can easily be replaced. Remove the old gasket by gently pulling it out of the gasket retainer and simply push in the new gasket leaving the corners until last.




End of Life Disposable Requirements

Refrigerated cabinets have components that could be harmful to the environment. All end of life equipment must be disposed of in accordance with national laws and regulations.

Fault Finding

In the event of cabinet fault/failure, please check the following:

1. Plug is in socket and power to the socket can be proven by plugging another appliance into the same socket or swapping the problem cabinet to a socket that is known to work.
2. The fuse located in the plug is intact.
3. The condenser is clean and free from dust or debris.
4. Door gasket is sealing and free from damage.
5. Check if the evaporator is iced up, if found to be iced up press and hold  to activate a manual defrost cycle.


If this doesn't solve the problem, please call a qualified technician.

When requesting a service call, please find the manufacturers data plate and provide the model, serial number and details of any fault codes that are displayed.

Alarms


Alarms

The controller is equipped with visual and audio alarms:

Alarm Displayed	Description	Action Required
hi	High Temperature Alarm	Press a button to cancel / check
Lo	Low Temperature Alarm	Press a button to cancel / check
E1	Probe T1 Failure	Call Engineer
E2	Probe T2 Failure	Call Engineer
OFF	Cabinet in Standby	Press  for 3 seconds

Press any button on the controller to silence an alarm.

Electronic Controller Display

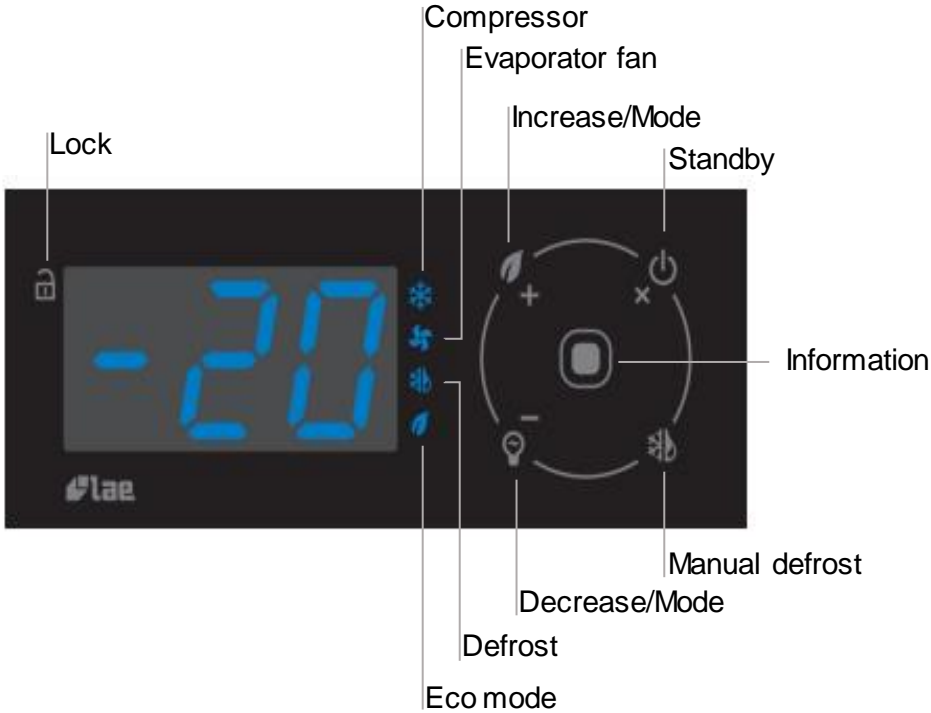

TU5S INSTRUCTIONS FOR NAVIGATION

1. DISPLAY



2. DISPLAY LEGEND

LED		BUTTONS	
	Thermostat output		Enter / Confirm
	Fan output		Decrement / Lights
	Defrost output		Increment / Eco mode
	Eco mode activated		Exit / Standby
	Keyboard unlocked (*)		Manual defrost

(*) Led off = locked, Led on = unlocked.
Led will blink to notify the key detection.

3. OPERATIONS

Unlock	Standby	Eco mode	Manual defrost	Manual lights
x2	2 sec	2 sec	2 sec	

4. MENU


NAVIGATION and VALUE DISPLAY	ITEM MODIFICATION
<ul style="list-style-type: none"> Display value or enter in submenu Next item Previous item Exit 	<ul style="list-style-type: none"> Increase Decrease Save and go to following item To exit without saving, press the key or wait 10 sec

MAIN MENU	INFO SUBMENU ITEMS
SP Display and modify main setpoint	T1 Temperature measured by probe T1
IISP ¹⁾ Display and modify alternative setpoint	T2 Temperature measured by probe T2
TIM Display and modify system minutes/hours (MIN, HRS)	T3 Temperature measured by probe T3
TAC ²⁾ Display and modify start and end time for function activation (Eco mode or light)	THI Maximum temperature measured
INF Info submenu	TLO Minimum temperature measured
	CND* Compressor working weeks
	PSD Enter Password for parameters submenu access
	* Only if ACC different from 0


5. PARAMETERS SUBMENU

To enter in parameters submenu, enter PSD = 12 on info submenu.


<parameters table: SPL, SPH, etc...>

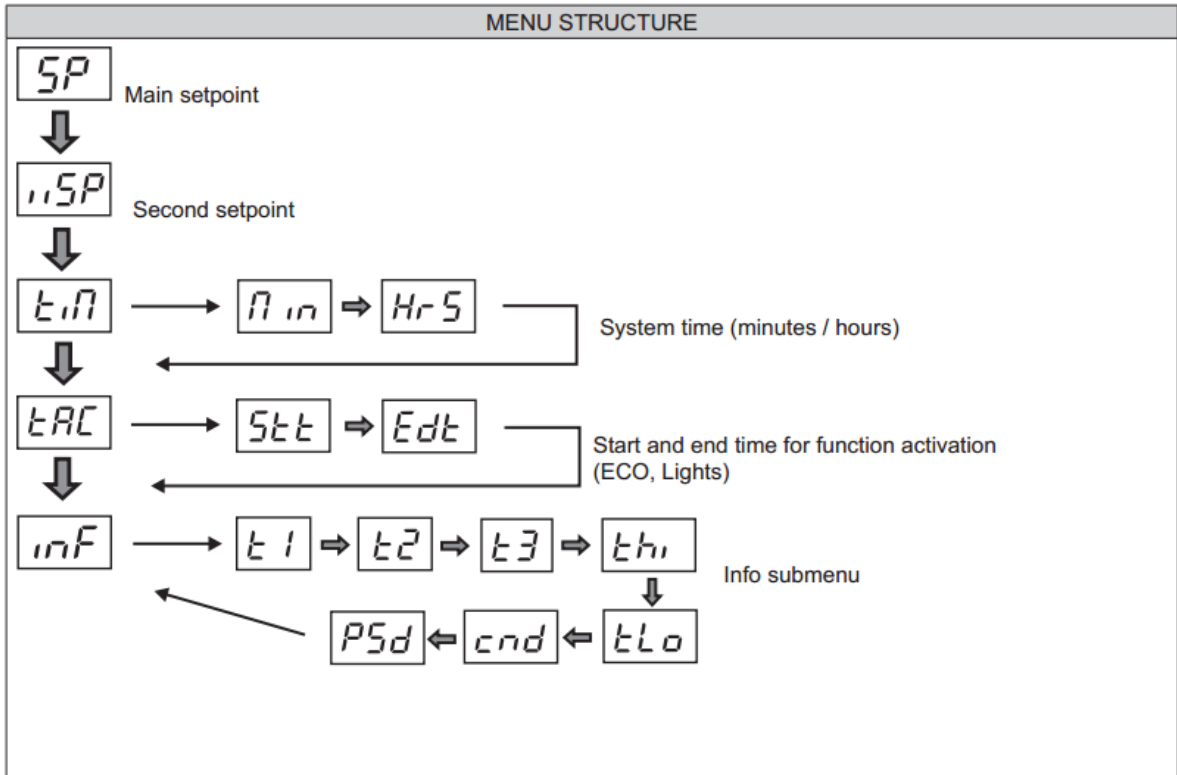

Wiring Diagram

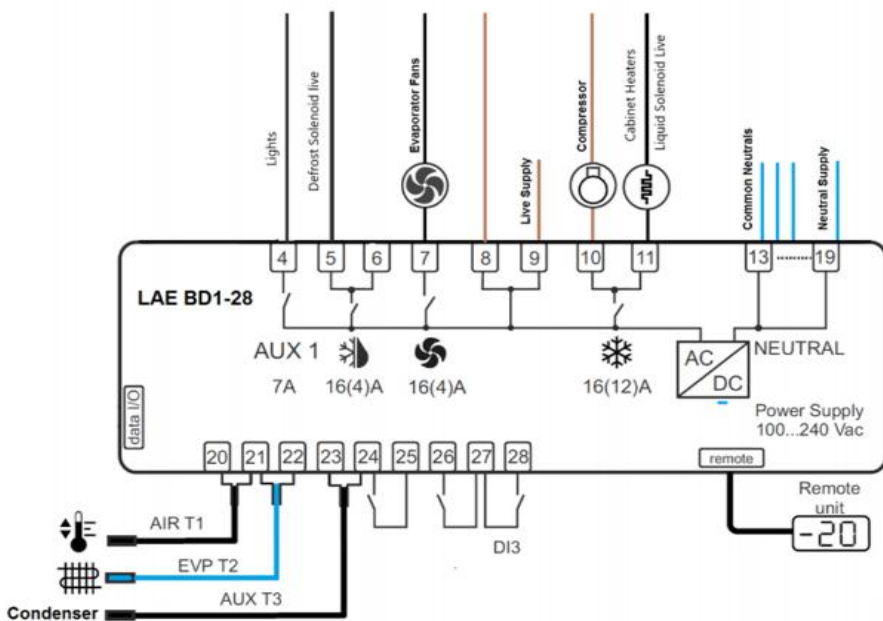

Wiring Diagram

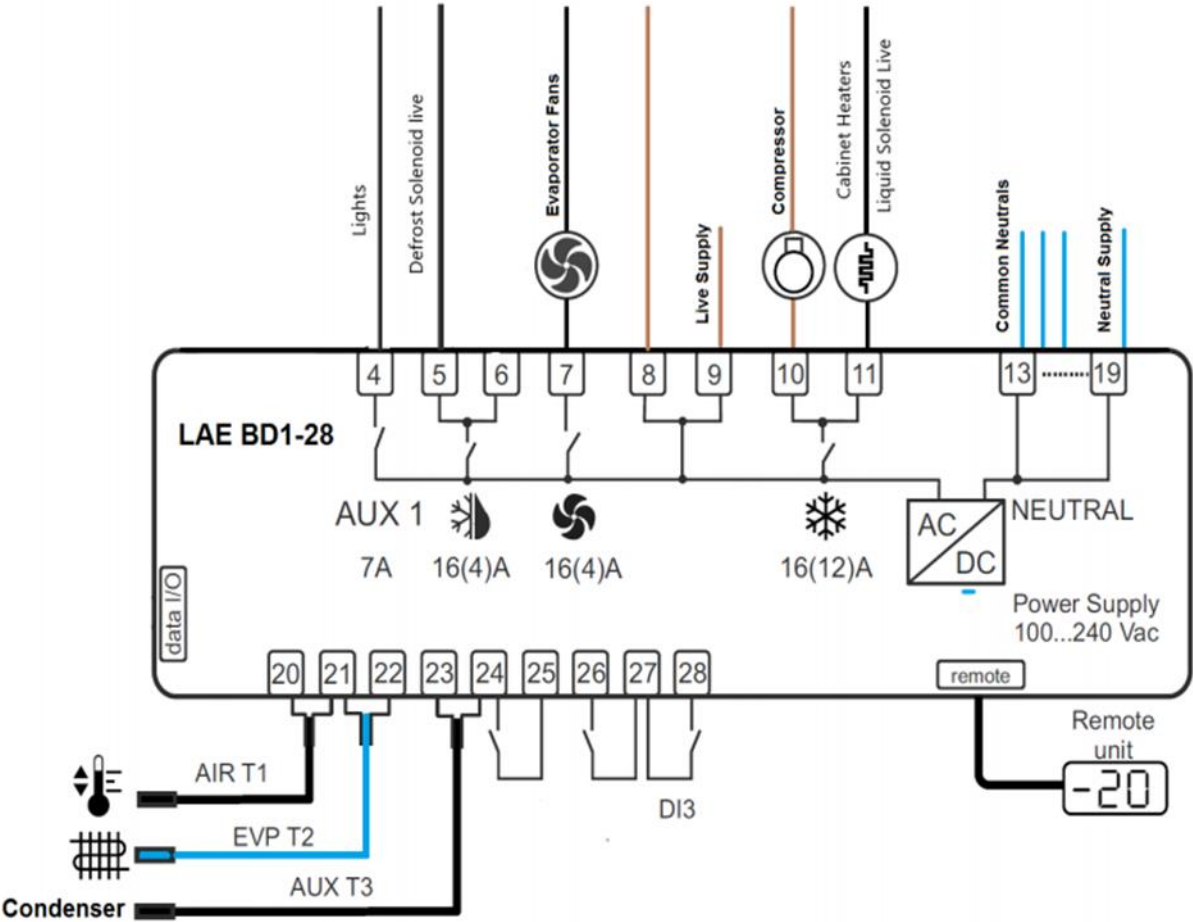

Model:

Serial Number:

GWP Values for Refrigerants:

R1234Ze - ~ 1

R290 - 3

R134a – 1300

R404a – 3943

These units contain fluorinated greenhouse *gases covered by the F Gas directive*

Declaration of Conformity References:

Low Voltage Directive 2006/95/EC

EC Machinery Directive 2006/42/EC

Electromagnetic Compatibility Directive
2004/108/EC

Pressure Equipment Directive 97/23/EC

RoHS / WEE Directive 2002/95 EC

